

说明书尺寸: 宽200mm*高246mm

PROFESSIONAL CLIPPER CP-9020C

Instructions for use, maintenance, and safety

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE CLIPPER.
SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

WARNING: To reduce the risk of burns, fire, electric shock or injury:

- Never use the clippers for anything other than the purpose for which it is designed.
- The machine must not be used outdoors and in wet locations. It must be kept away from water.
- Check that the voltage indicated on the clipper corresponds to your electrical supply. Your electrical supply should meet current safety standards and be fitted with a 30 mA circuit breaker.
- Use only accessories and power cord supplied with the machine
- This machine is not designed to be used by people (including children) whose physical, sensory, or mental capacities are reduced, or by anyone without the necessary skills or knowledge, unless they are specifically monitored or have been instructed in the use of the machine by somebody responsible for their safety".
- Never allow children or unskilled persons to use the clipper without supervision.
- Do not use this machine if:
 - If the power cord is damaged,
 - In case of malfunction,
 - If the machine has been damaged in any way,
 - If you dropped the machine or,
 - Has been dropped in water.

Take the machine to a technical assistance centre for inspection and repair if necessary

- If the power cable is damaged, it should be discarded and replaced with an identical model.
- Make sure to keep the machine away from hot surfaces.
- Do not expose to direct sunlight and dust.

- Do not wrap the cord around the appliance when storing. The friction on the cord may damage the insulation and cause a risk of short circuit.
- Do not use a cutting blade with a missing tooth or if it is damaged as you will cut you. Make sure the blades are aligned and oiled
- Avoid touching the blades when they are moving.
- Make sure that the power cord can not be walked on or pinched particularly at the power supply, power outlets, and the connection point of the machine.
- Always unroll the power cord when using (in order to avoid overheating).
- Never unplug the machine by pulling on the cordless but by pulling the power socket
- When cleaning the machine, always unplug from the electrical outlet.
- Do not use the clipper on wet coat. Moreover, you will not have any results because it is designed to cut dry coat.

DANGER: RISK OF ELECTRIC SHOCK!

Never immerse the machine in water or any other liquid.

Similarly, do not use this machine near water or moisture source such as a bathtub, sink, kitchen sink, swimming pool, or other location where there is risk projection of water.

- Never use the clipper with wet hands.

If the clipper fall into water and it's connected to the power supply, unplug the power supply before picking up the clipper

- If the clipper stop working or do not work correctly, turn it off and do not open it. Repairs should only be performed at a technical assistance center.

NEVER OPEN THE CLIPPER

TECHNICAL SPECIFICATIONS

Clipper A – 2 speeds 100-220 V – AC 50-60 Hz - 30 watts

USE OF THE CLIPPER

Make sure that the clipper and the blade are clean before starting to clip, as dirt will prevent the clipper from running smoothly.

Plug into the power outlet. Lubricate the blade

Turn the clipper on with the on / off switch and turn off the clipper after use.

This model of clipper operates on main power.

If after a period of use, your clipper does not perform as well as before, we advise replacing the blade or making it sharpens. The use may be compromised by the presence of electrical contacts that are unclear.

REPLACEMENT OF THE BLADE

The clipper makes it possible to leave different lengths of cut either by using different blades provided in option in the range AGC CREATION, (list on the back of the packaging).



picture 1



picture 2


To replace the blade, turn the clipper OFF, release the blade while supporting on the spring and in the center of the blade (picture 1) then to make slide on the hinge (picture 2). To position back the blade, put the clipper in position ON, insert the blade on the hinge then to press it until hearing the "clac" blocking.

CLEANING AND MAINTENANCE

Before cleaning, turn off the clipper and remove the plug from the power socket..

Use a soft and dry cloth to clean the body of the clipper.

- Do not use abrasive cleaners, scouring pads or substances such as alcohol or acetone to clean the clipper.
- To ensure that the clipper continues to produce a high quality of cut, blades should be cleaned and lubricated regularly (lubrifiant AGC CREATION ref C703 sold separately).
- After each use, remove the remains of coat of the blade using a cleaning brush.
- Do not use inappropriate solvents (greases, e.g cream, etc)

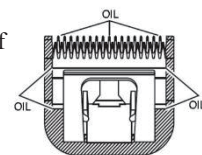

ENVIRONMENT – Waste sorting

This symbol on the product or its packaging indicates that this product should not be treated with household waste. It must be given to a suitable collection point for the recycling of electrical and electronic equipment. Place this product in a collection point or in a waste collection

